## SPEEDBRACKET™ Arm Change

#### FREEDOM MICRO® II SpeedBracket




Loosen the arm locking security screws on the universal bracket to loosen the bracket arms.



Some brackets may only have center locking screw

If replacing arms, pull both opposing arms out. (1)
The bracket arms move simultaneously in pairs (top & bottom, and left & right). If arms do not need to be replaced, do not remove. (2)


1.

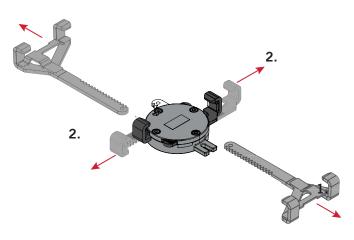



Remove only arm set to be replaced

Insert New arm or arms. (1) Opposing arms must be inserted into center hub at the same time to ensure the device will be centered.

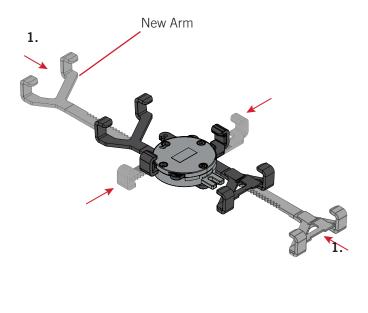

New Arm shown is example. Actual arm may vary depending on merchandised device

**4** Place the phone into the universal bracket.




## SPEEDBRACKET™ Arm Change


#### FREEDOM MICRO® II SpeedBracket




**5** Adjust the universal bracket to fit the device snugly.

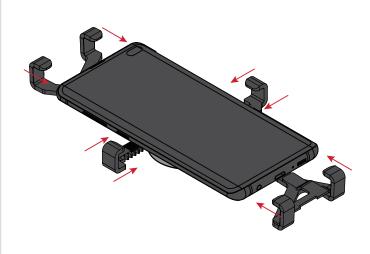


Tighten center locking security screw on the SpeedBracket™ to secure the bracket arms in place around the device. After tightening screws, wiggle the arms to ensure they have fully engaged the lock teeth.

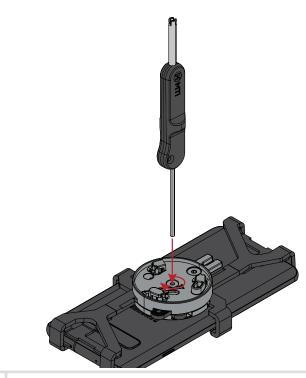

Place pressure on the top/bottom and the sides to try and move arms. This is to find if the arms did not seat correctly.

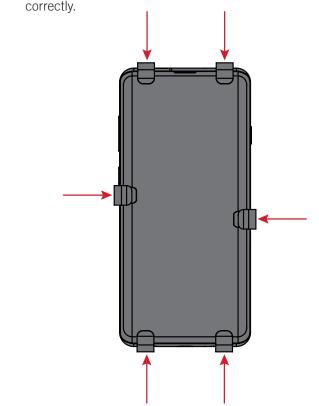


8 Tighten center screw again until tight. Tighten the other bracket security screw for additional security.

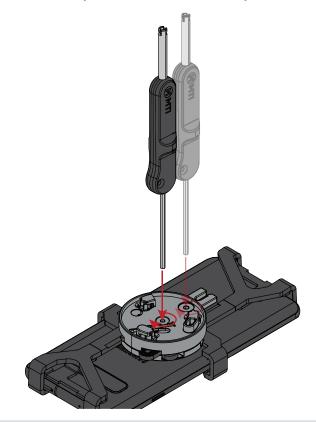

# SPEEDBRACKET™ Arm Change

### FREEDOM MICRO® II SpeedBracket



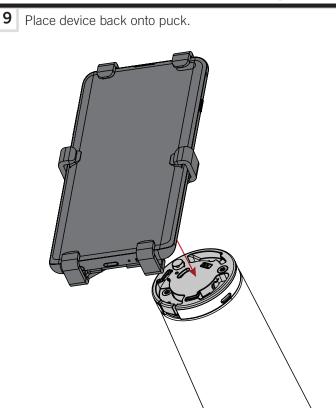



Grab the exposed portion of the puck with your thumb and forefinger. Move the phone back and forth to checking to ensure the bracket locked in place.

