



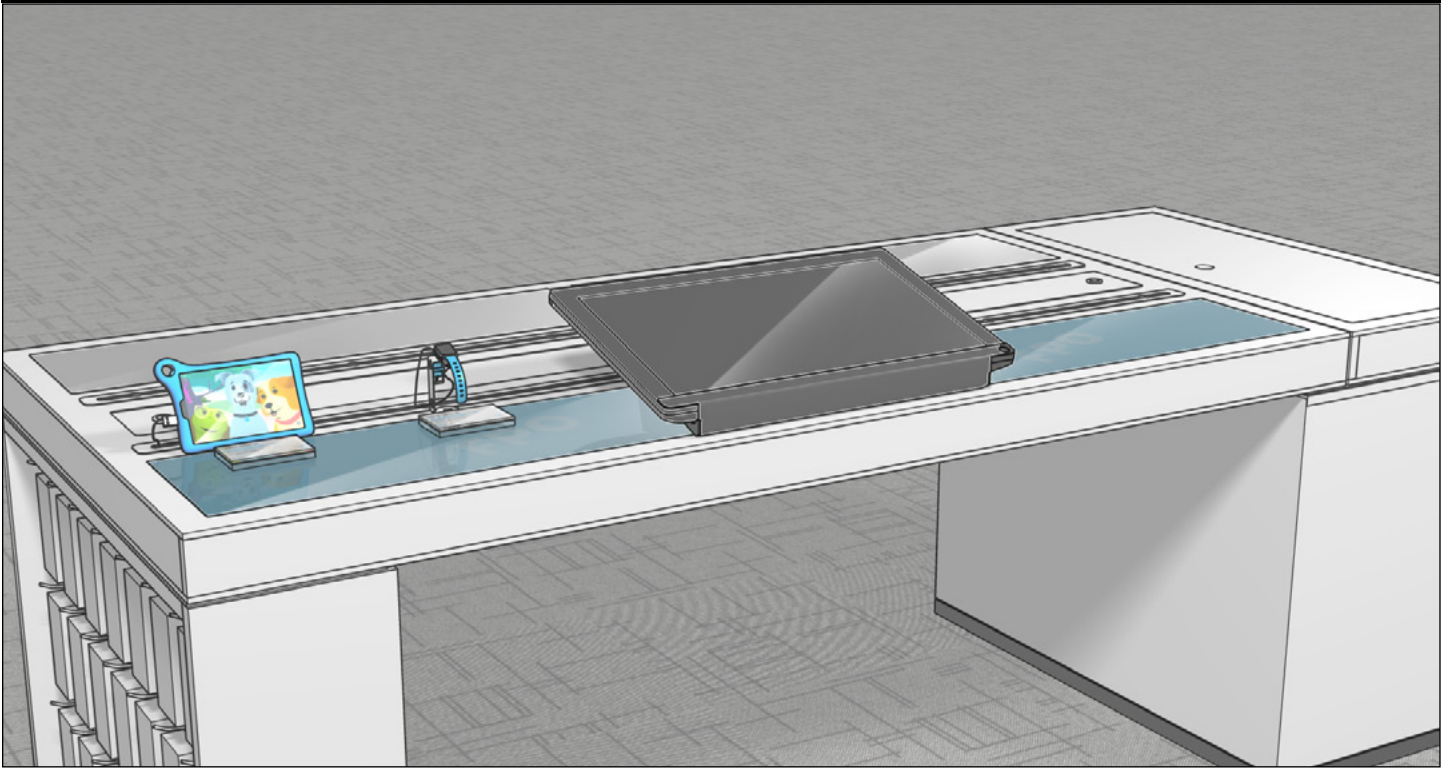

Community Table 2 Update



 
CONTENTS:

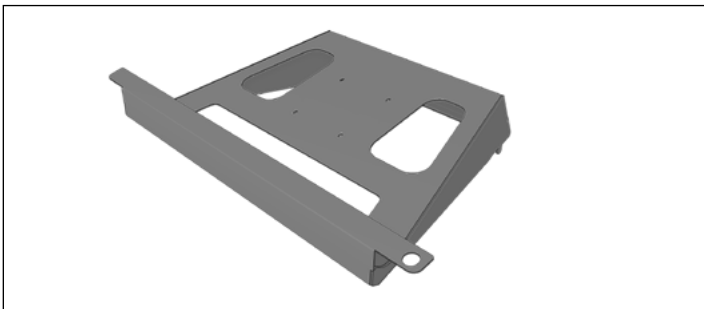


Monitor Stand
QTY: 1




M4 Thumbscrew
QTY: 4



T-8 Torx Key
QTY: 1

 

Phillips Head Screwdriver
QTY: 1

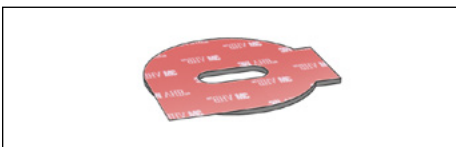

VHB Adhesive (for watch stem)
MERMS092412702Ea
QTY: 1



Table Mat Acrylic
QTY: 2



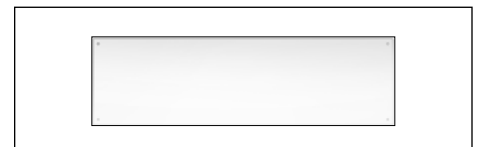


Table Mat Pan
QTY: 2


Table Preparation

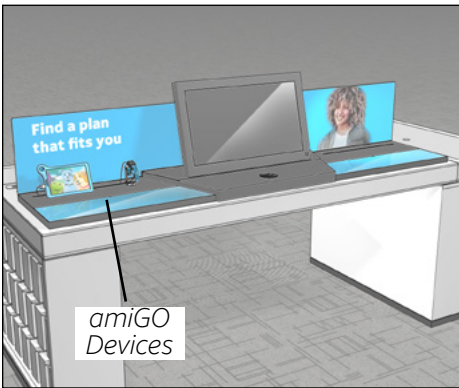

1. Locate Community Table 2. Open electrical well. Disarm alarm unit for amiGO tablet and watch device.

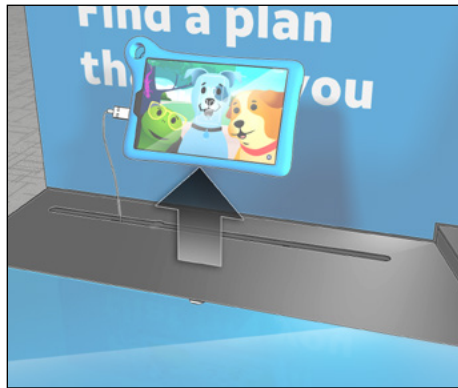



2. Disconnect amiGO tablet security cable from alarm unit. Remove tablet from table and **set aside for use with update.**

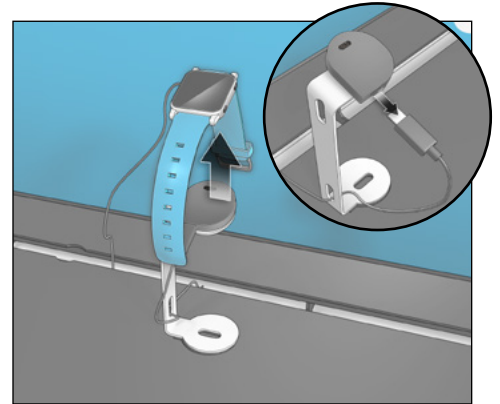


3. Disconnect watch security cable from alarm unit. Disconnect power from watch charger. Remove watch device from stem. **Do NOT remove sensor cord adhered to back of watch.**



4. Use a **VHB Removal Tool** to remove watch stem from table.

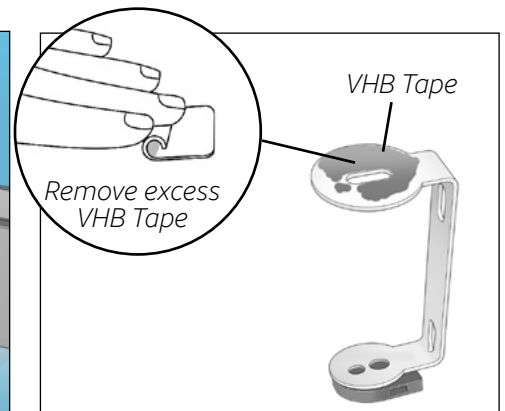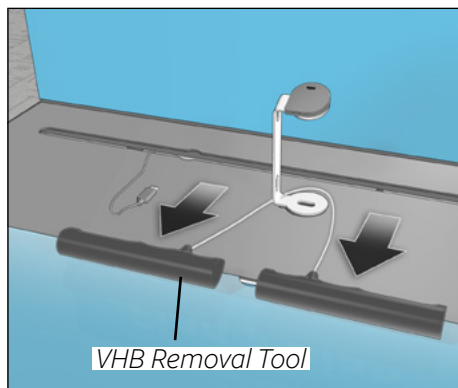


5. Use your finger to remove any excess VHB tape from bottom of watch stem. **Set stem and watch aside for use with update.**

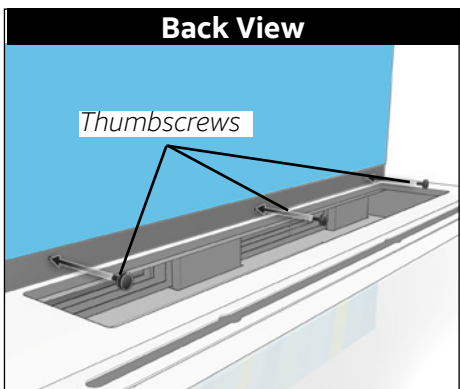


6. Remove thumbscrews from back of riser graphic panels and remove them from table. Discard riser panels.




Community Table 2 Update

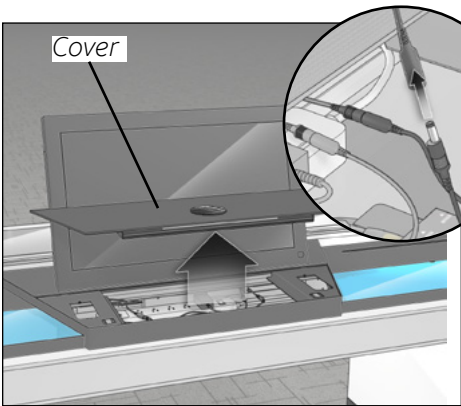


7. Lift front cover off display. Disconnect LED cable.

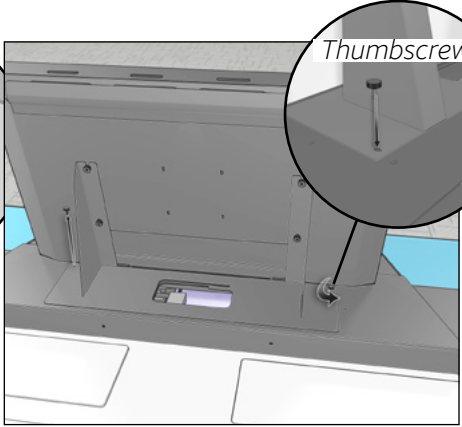


8. Remove Thumbscrews from base of monitor.

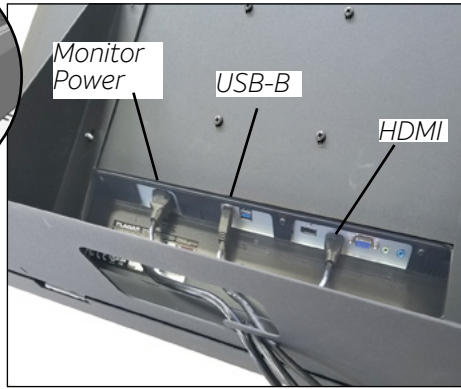


9. Disconnect HDMI cable, USB-B cable, and monitor power cable from back of monitor.

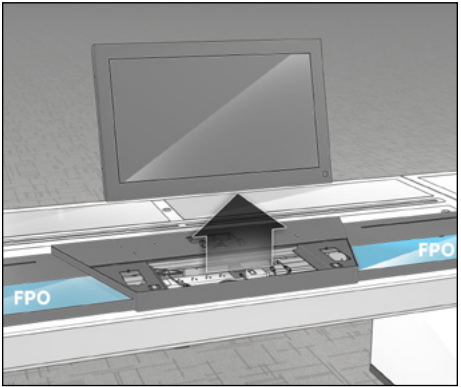


10. Remove monitor with metal housing and set aside.

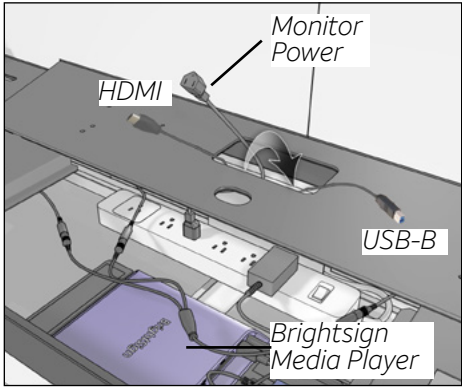


11. Temporarily thread the HDMI cable, USB cable and monitor power cable inside the table.

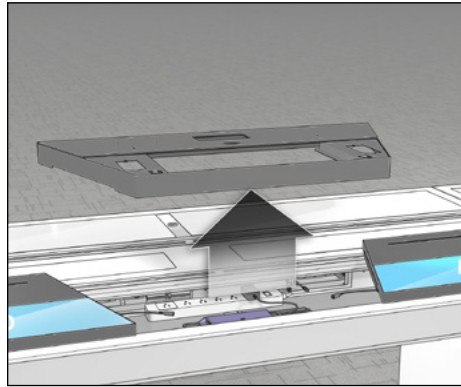


12. Remove center platform and discard.

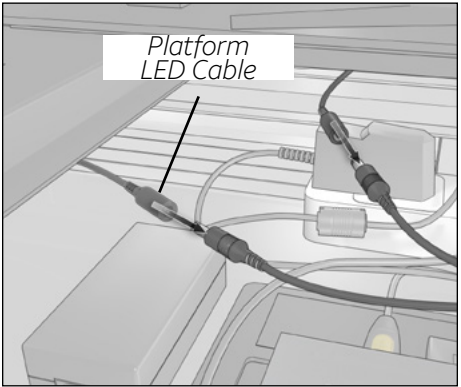

13. Disconnect LED cable from left and right platforms. Remove platforms from table and discard. **Clear inside of table of any unused power adaptors and cords. Locate table well divider, that was stored inside the table. Set the divider aside for the update.**

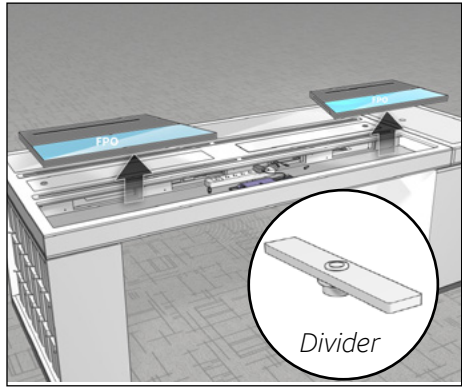


Before Proceeding, Remove Monitor from Metal Housing

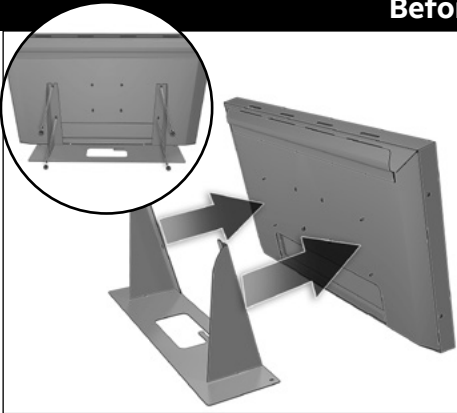

14. Remove thumb nuts from back of monitor. Remove stand bracket and discard.




15. Use T-8 Torx Key to remove screws from sides of monitor shroud as shown.

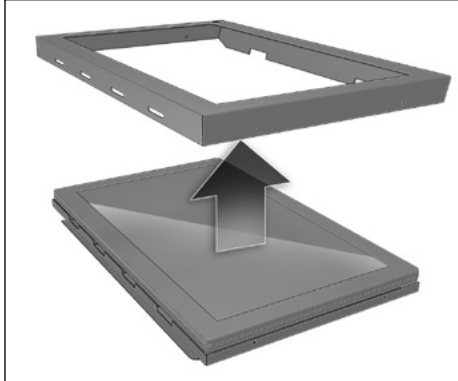


16. Carefully remove front shroud frame and discard.



Back View

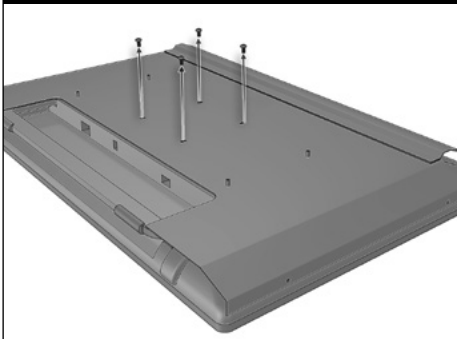

17. Use Phillips screwdriver to remove screws from back shroud frame as shown. Remove back frame and discard. **Set monitor aside to use with update.**

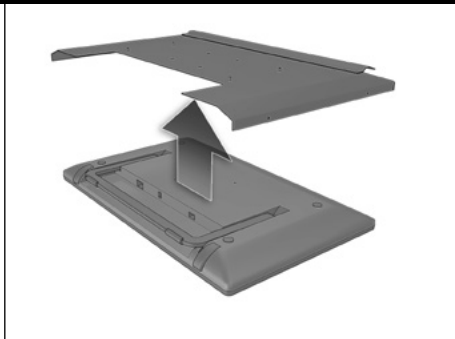


Community Table 2 Update

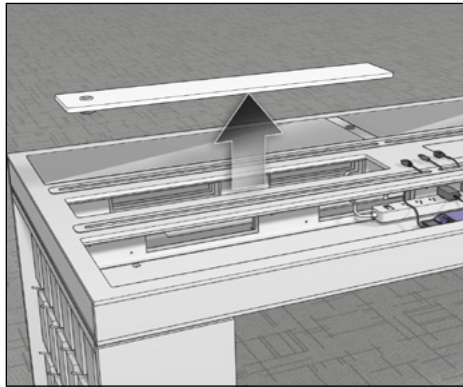
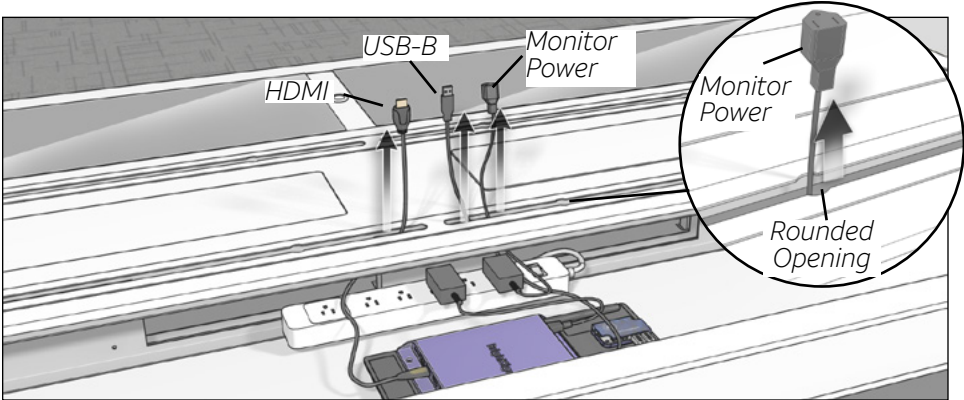


1. Thread HDMI cable, USB cable and monitor power cable up through table track as shown. **Tip: Use the rounded opening in the table track to make it easier to fit the monitor power cable through the track.**

2. Open the table electrical well.

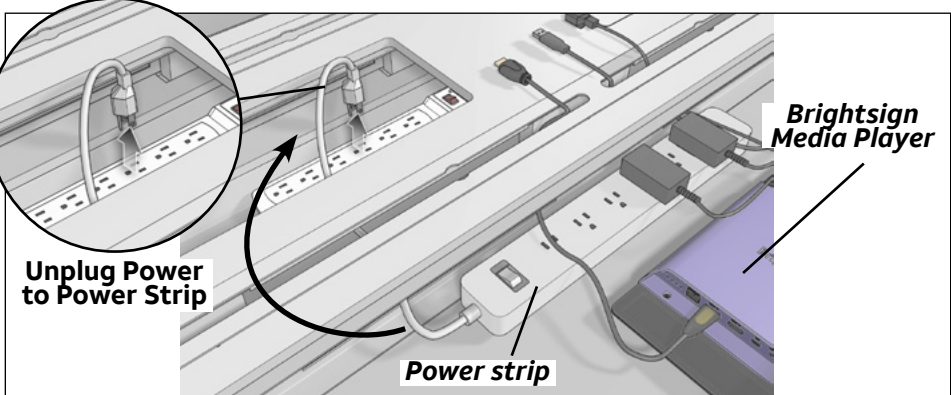


3. Locate the power strip that the Brightsign Media player is plugged into. Temporarily unplug power to that power strip. **Note: Do NOT turn power strip off, unplug it from the electrical outlet inside table.**

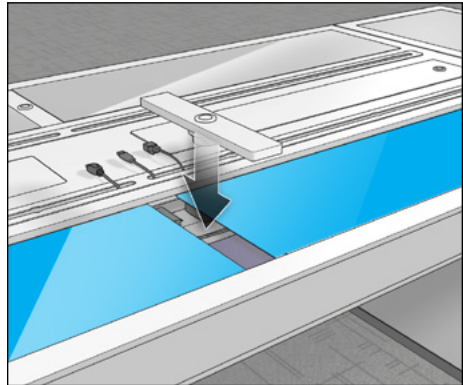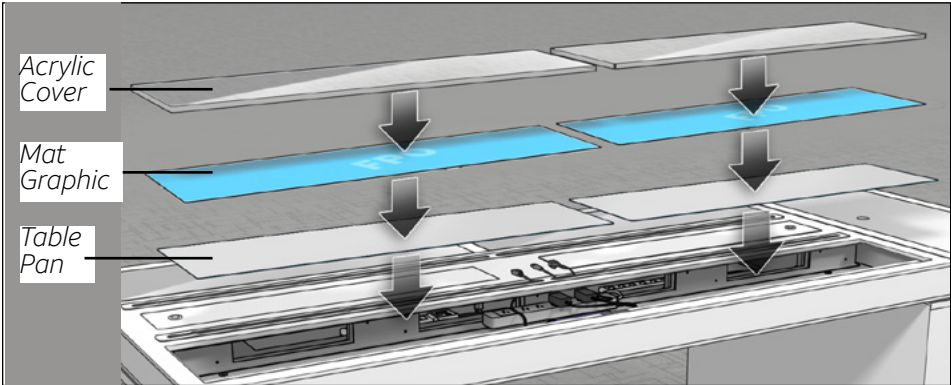


4. Place Table Pans onto table well first, followed by Mat Graphics (shipped separately) and then Acrylic Covers as shown above.


5. Locate divider that was stored inside table well. Place divider back onto table as shown.

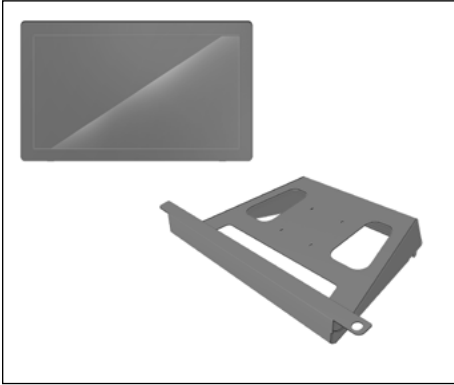


6. Locate Monitor (removed from previous display) and Monitor Stand from your merchandising kit.

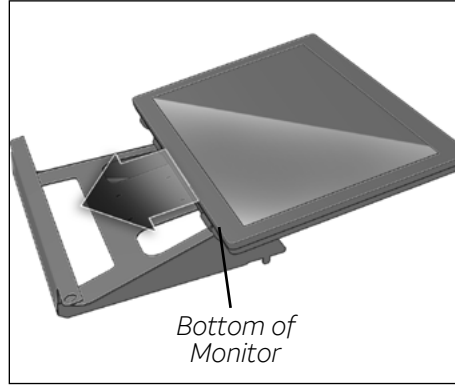


7. Place monitor onto stand as shown.

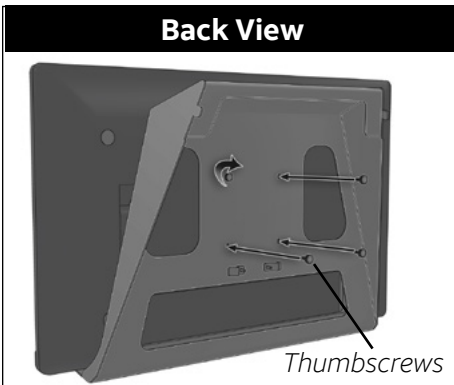


8. Use Thumbscrews provided to secure stand bracket to monitor.

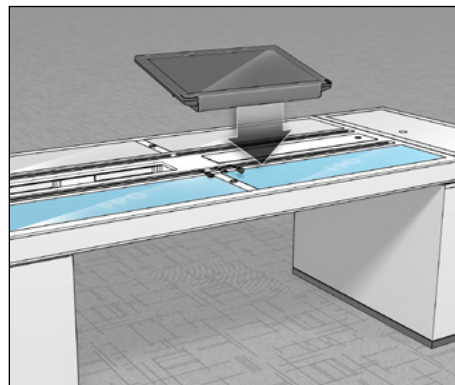


9. Place the monitor, with stand, onto center of table as shown.

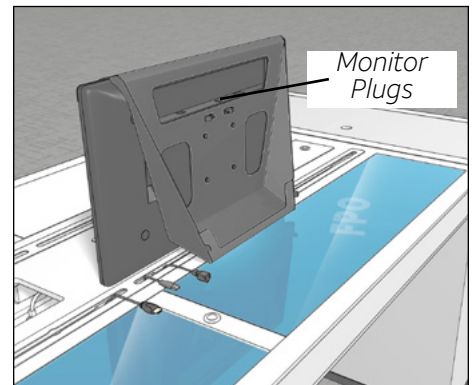

10. Carefully tilt stand on it's side so that the monitor plugs can be accessed.

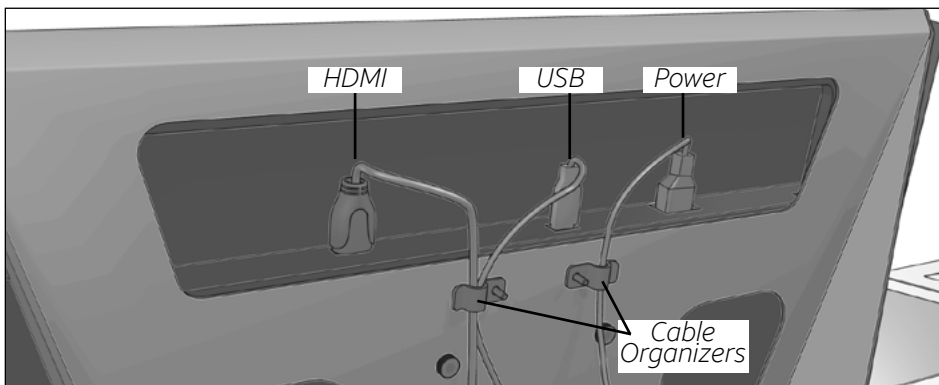


11. Plug HDMI cable, USB cable and monitor power cable into monitor as shown. Use cable organizers, to secure each cable as shown.

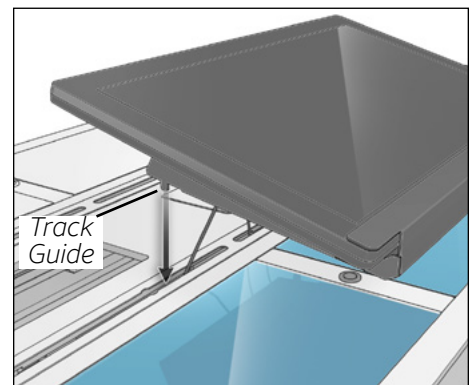


12. Place stand down on the table. Ensure Track Guides engage table track as shown.



Community Table 2 Update

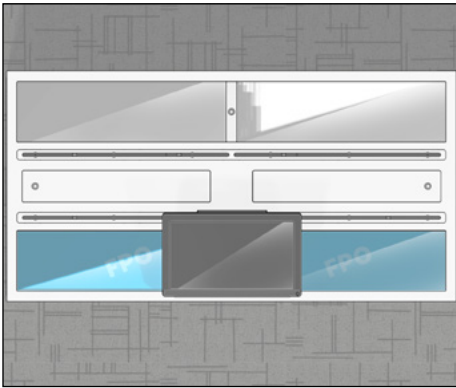


13. Position the monitor in the center of table as shown.

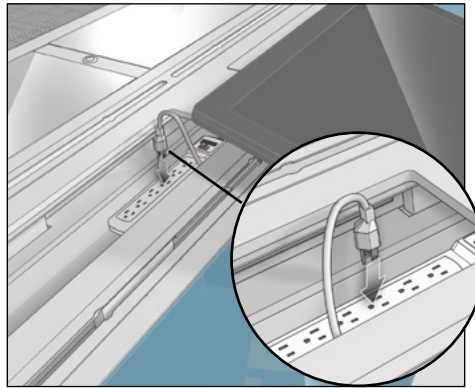



14. Plug the power strip, for the media player, back in. Allow a few minutes for the media player to begin playing content.

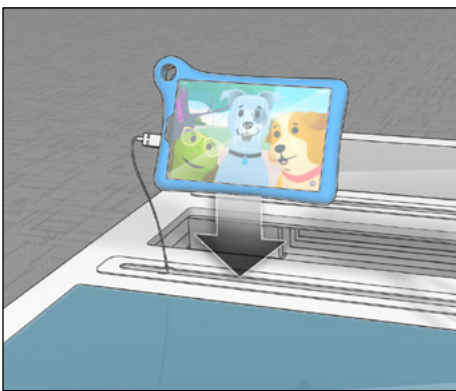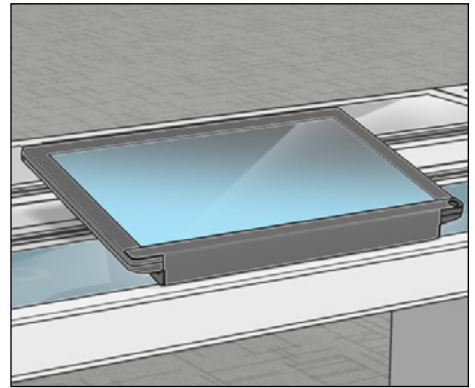


15. Install the Amigo tablet onto the left side of the table track as shown. Thread security cable into track and connect with alarm unit.

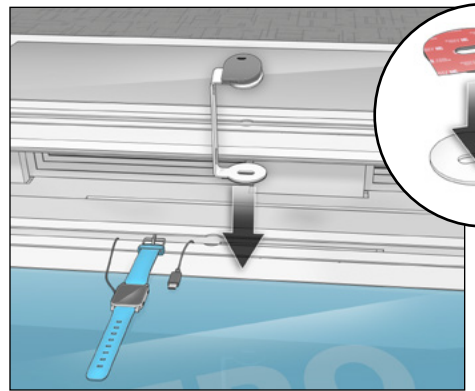


16. Place new VHB tape (**MERMS092412702Ea**), from your merchandising kit, onto bottom of stem as shown. Peel liner off adhesive. Stick stem onto table between the track and acrylic cover as shown. Thread watch charger power cable through table track and connect to charger.

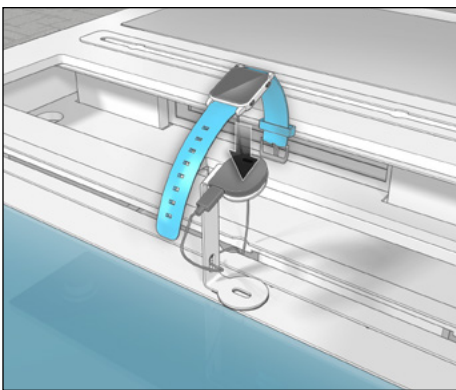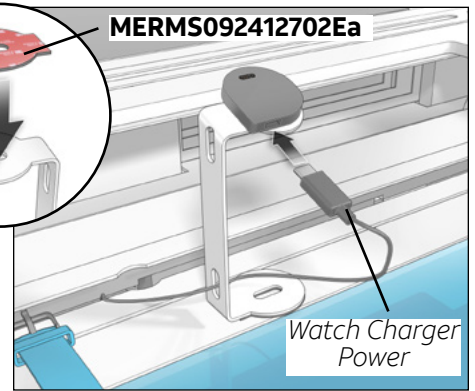

17. Place watch back onto stem. Thread security cable into track and connect with alarm unit. **Re-arm alarm unit.**

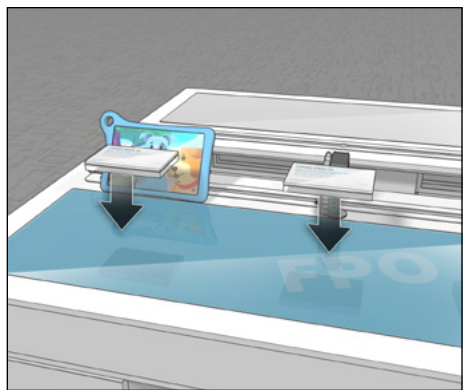

18. Place a price card holder in front of each device. Close electrical well.

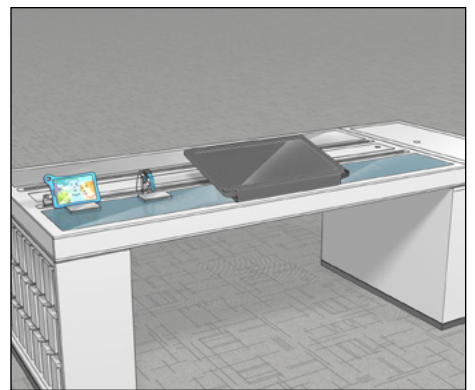

FINISHED VIEW

Display issues? Missing or damaged items? Floor plan concerns? We can help you with that!

Report issues with merchandising resets to AT&T Customer Support:

- You can **log in to Merchit eStore**, then click Report An Issue at the top or bottom of the home page
- You can text AT&T Customer Support at **404-777-5660** or email **ATTCS@archway.com** with the details.

Still want to talk to someone? For all issues, you can call us at 866-251-6100