



Freedom Watch

Installation Guide



Kit Components

ENTERTAINMENT MOUNT




SECURITY POST



TRACK MOUNT




Add optional rubber strips to bracket for smaller watch models. Some kits may not include rubber strips

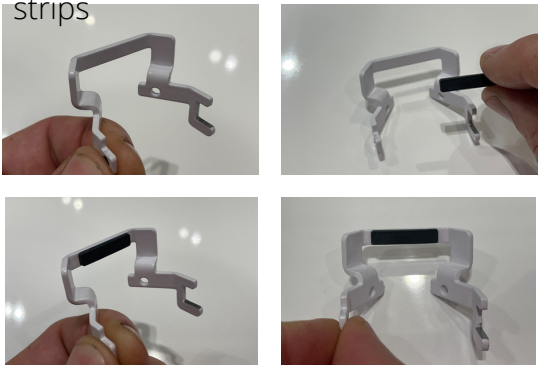

Step-by-Step Instructions:

STEP 01

Baseplate next to bottom side of riser post.

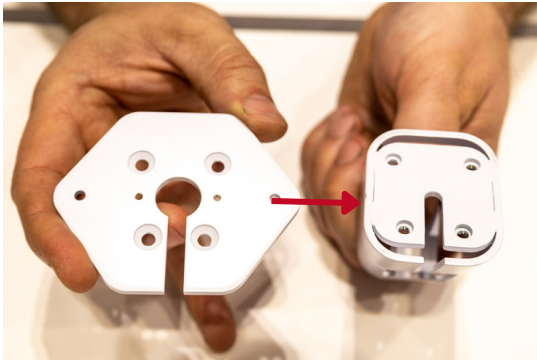


STEP 02

Attach baseplate to riser with four M4 screws with MTI Retail tool. Be sure screws are tight.




STEP 03

Attach track adapter to underside of baseplate with notch in adapter facing towards the cable routing channel in the post

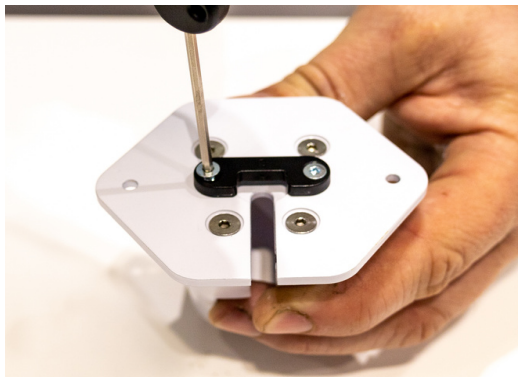

STEP 04

Install watch inductive charger into riser. Start by inserting through hole in back of riser.

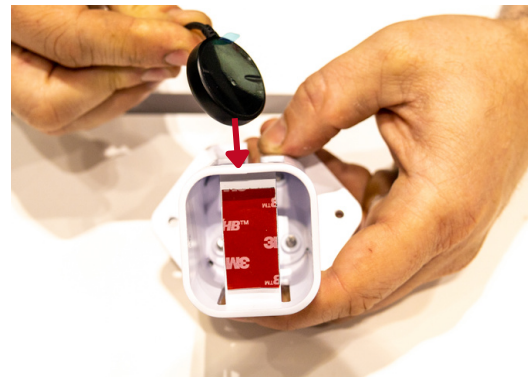

Step-by-Step Instructions:

STEP 05

Feed Inductive charger through one side of the cross bracket. Do not remove liner from VHB pad. Charger will float underneath the watch.



STEP 06

Slide brackets onto each side of watch.



STEP 07

Bracket halves will interlock with one another.




STEP 08

Insert watch/Brackets assembly into post. Everything is loose so this may take some finesse.



STEP 09


Secure brackets to riser with security head screws with MTI Retail Tool.

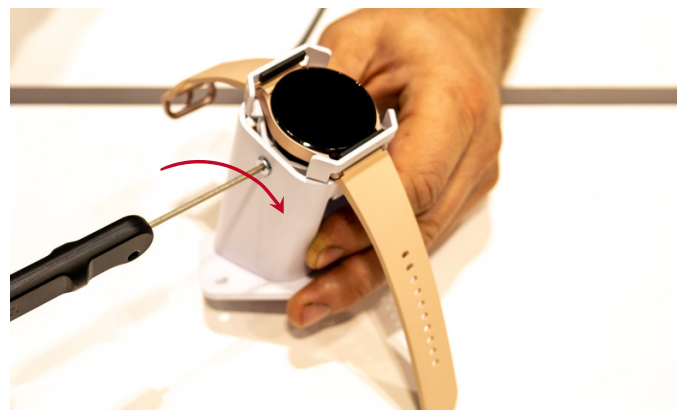

Step-by-Step Instructions:

STEP 10

Using 6-32 screws slipped into mounting tabs, install "pills" with the dimples facing up.

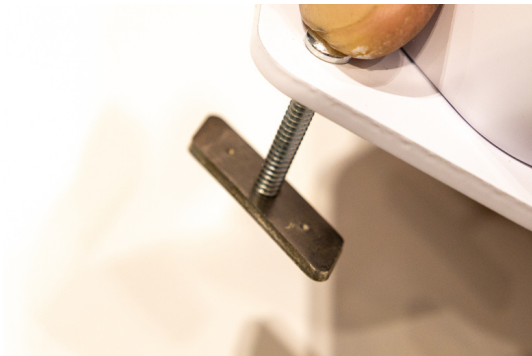

STEP 11

Insert riser into slot. Tighten the mounting screws. The metal "pills" will rotate into place to allow them to engage with the fixture.



STEP 12

Finished product.



STEP 13


Plug inductive charger into power brick. Power brick will be plugged into nearby outlet.



Step-by-Step Instructions:


STEP 01

Baseplate next to bottom side of riser post.

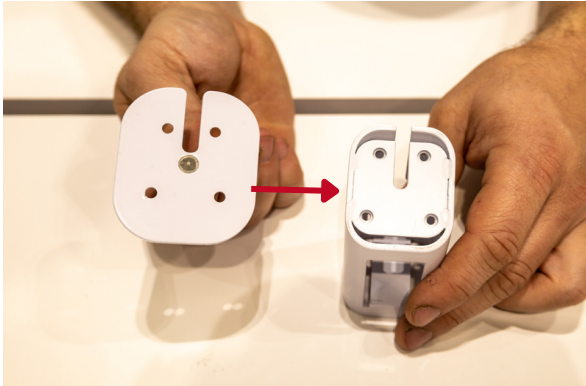

STEP 02

Attach baseplate to riser with four M4 screws with MTI Retail tool. Be sure screws are tight.

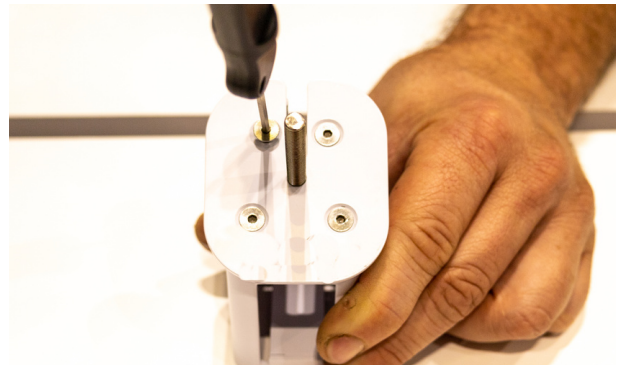

STEP 03

Attach through hole adapter to underside of baseplate with notch in adapter facing towards the cable routing channel in the post.



STEP 04

Install watch inductive charger into riser. Start by inserting through hole in back of riser.



Step-by-Step Instructions:


STEP 05

Feed Inductive charger through one side of the cross bracket. Do not remove liner from VHB pad. Charger will float underneath the watch.



STEP 06

Slide brackets onto each side of watch.

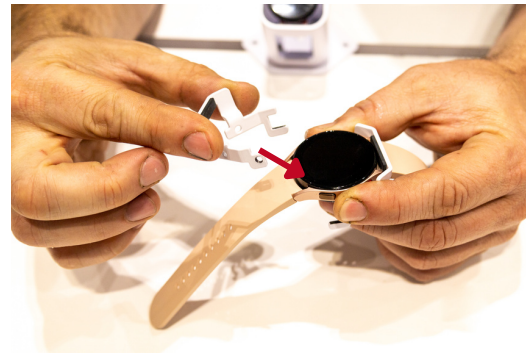

STEP 07

Bracket halves will interlock with one another.




STEP 08

Insert watch/Brackets assembly into post. Everything is loose so this may take some finesse.



STEP 09


Secure brackets to riser with security head screws with MTI Retail Tool.

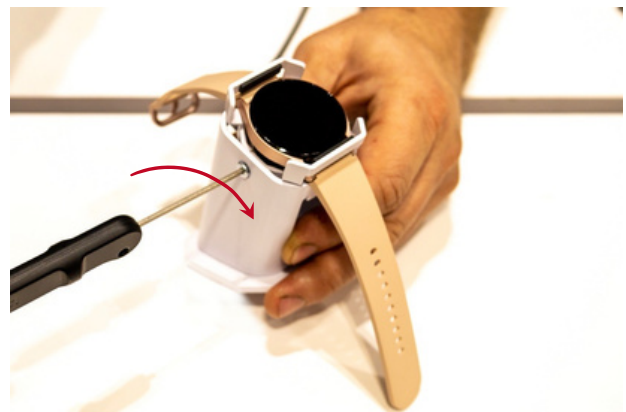

Step-by-Step Instructions:


STEP 10

Slide post and charge cable through the hole in fixture. Slide backing plate over post.

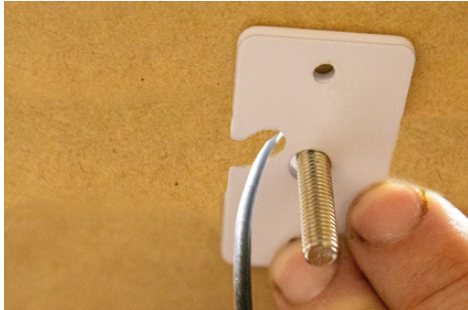

STEP 11

Tighten black knob until post is tight against fixture.

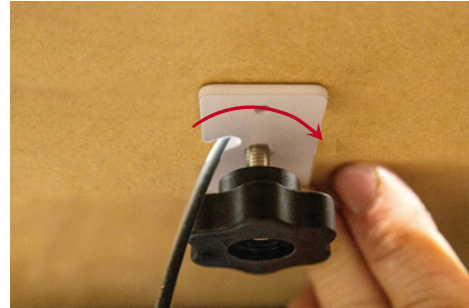

STEP 12

Finished Product.



STEP 13

Plug inductive charger into power brick. Power brick will be plugged into nearby outlet.

