




# Freedom Micro 2 Motorola Razr Speedbracket

*Installation Guide*



## Kit Components

FREEDOM MICRO 2 MOTOROLA  
RAZR ANGLE BRACKET

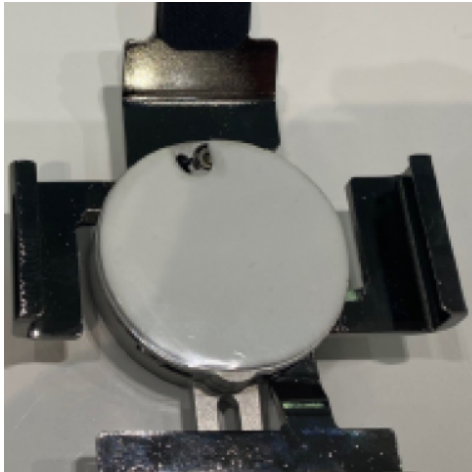

OR

FREEDOM MICRO 2 MOTOROLA  
RAZR BRACKET



### Additional Required Items (not included)

ALCOHOL WIPE



PHONE



FM2 TOOL



## Step-by-Step Instructions:



Bracket will come pre-spaced! Only follow steps 02-03 if you've accidentally loosened.

### STEP 01

Visually confirm small number (2-3 grooves) are visible



### STEP 02


If loose, adjust to match Step 01



NOTE: Top & bottom arms shall remain fully collapsed through the installation process!

### STEP 03

Once arms are corrected, tighten central screw

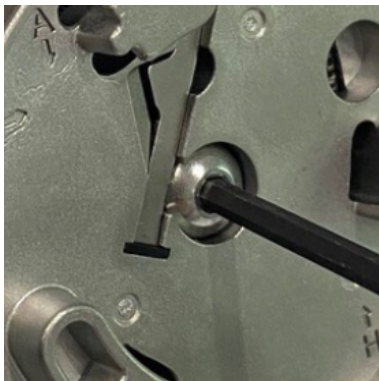

## Step-by-Step Instructions:

### STEP 04

Test Fit.

Place lower edge of device under lower arms.



### STEP 05

Test Fit Continued.

Phone should slip past side arms.


If side arms are too tight. Go back to Step 01.



**⚠ Do not peel adhesive liner during Step 04 and 05**


### STEP 06

Clean phone.

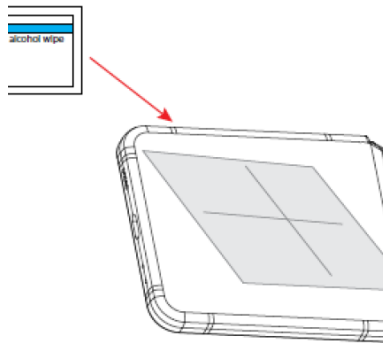

### STEP 07

Check clip and charger port alignment.

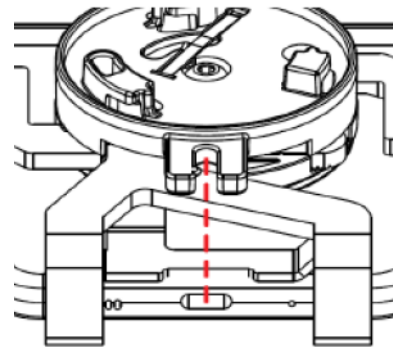




## Step-by-Step Instructions:

### STEP 08

Remove liner.

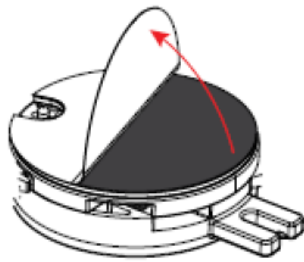


*Check alignment before sticking.*

### STEP 09

Repeat steps 04-05.

Apply pressure.

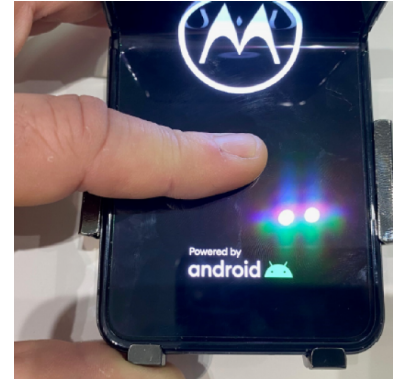


NOTE: Top & bottom arms shall remain fully collapsed through the installation process!

### STEP 10

Loosen screws.

Press side arms, tightly.

Tighten central screw.

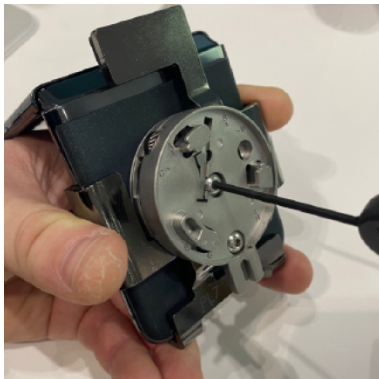

### STEP 11

Continue pressing side arms.

Tighten lower screw.



## Step-by-Step Instructions:

### STEP 12

Click bracket onto the stand.



### STEP 13

Plug in phone charging cable.



### STEP 14

Check top arm angle.

Should look like image.

If it doesn't start over.

