



AT&T



# Freedom Micro II Samsung Flip5 SpeedBracket

*Installation Guide*



## Kit Components

### Flip5 SpeedBracket



PN #165-01386

### Double-Sided System Tool



PN #M0495


### Alcohol Wipe



## Step-by-Step Instructions:

### STEP 01

Clean rear side of phone with an alcohol wipe.

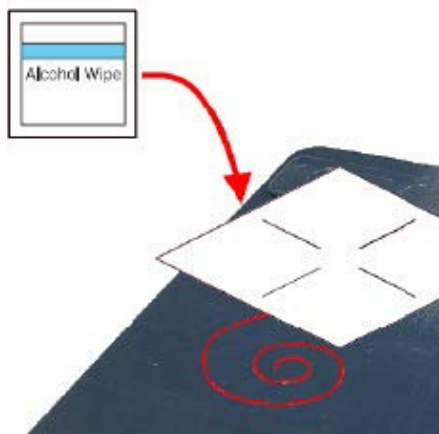

### STEP 02

Remove liner from the adhesive pad of the Flip5 SpeedBracket.



### STEP 03

With the phone in a folded position, assemble the SpeedBracket to the phone lining up the long edge of the phone with the short bracket arm.



### STEP 04

Use the system tool to loosen the 2 screws on the back of the plate, which allows the long bracket arms to loosen and slide out:



## STEP 05

Adjust both side bracket arms to fit securely around the left and right edges of the phone:



## STEP 06

Tighten the 2 screws on the back using the system tool:



## STEP 07

Install the bracket into the puck of the Freedom Micro II, rotating clockwise until it clicks into place and locks:

