


FREEDOM MICRO UNIVERSAL BRACKET

Part numbers 165-01034, 165-01404


FREEDOM MICRO® INSTALLATION GUIDE




- 1** Loosen the bracket arms with the Double Sided System Tool via the access holes on the back and pull the bracket arms out.

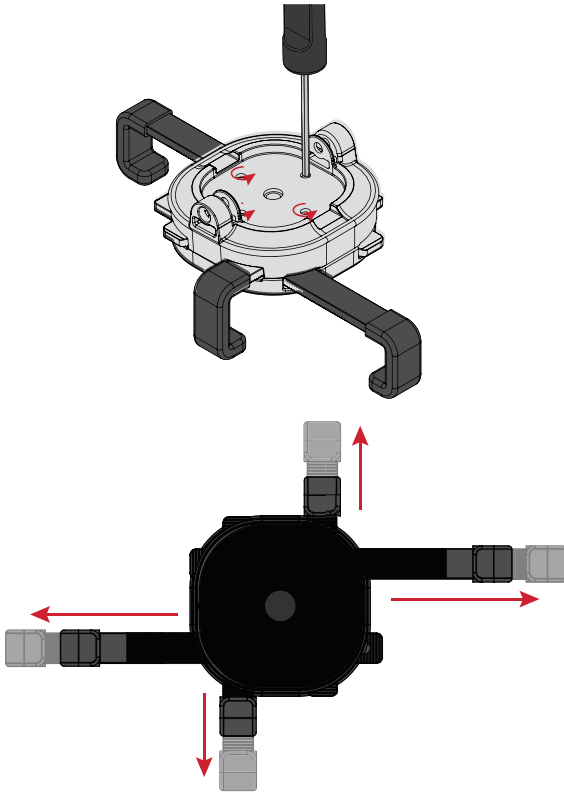


- 2** For new brackets, peel clear film off of NanoGrip. If reusing bracket, nano-grip can be cleaned with water and a soft cloth.

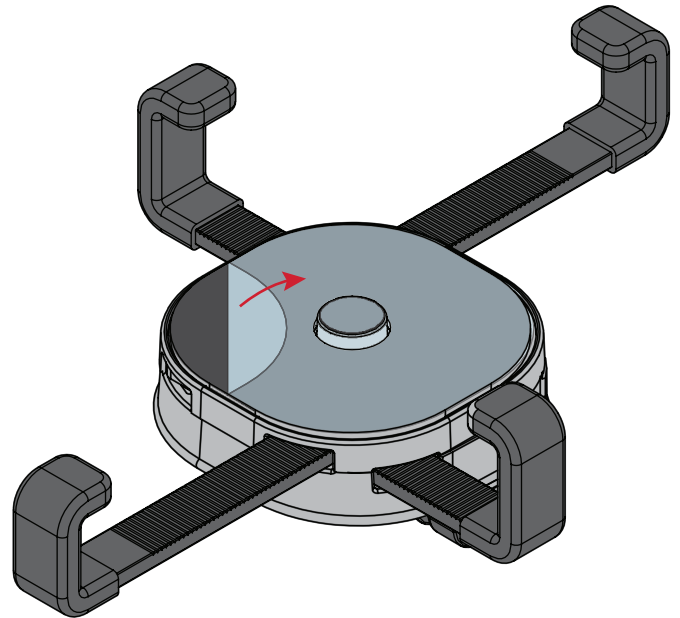

- 3** Place device in the bracket and press down for NanoStick to hold in place.

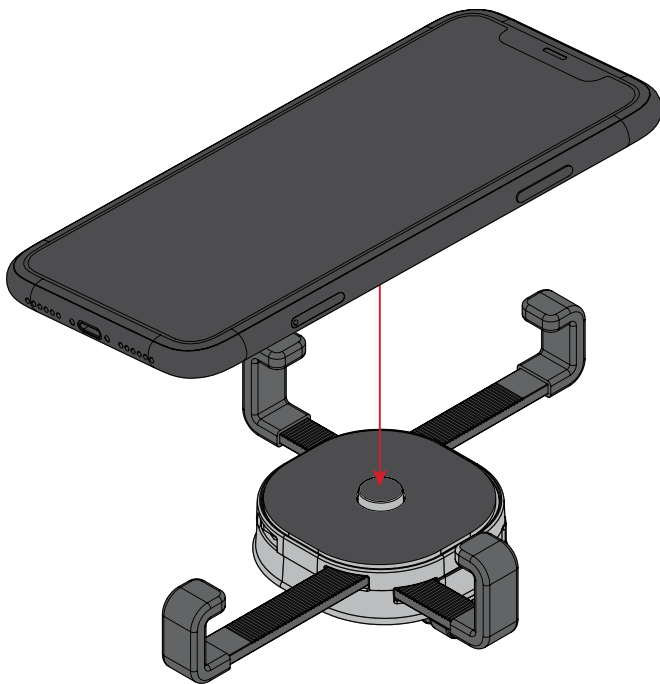

- 4** Adjust the brackets to fit the device.

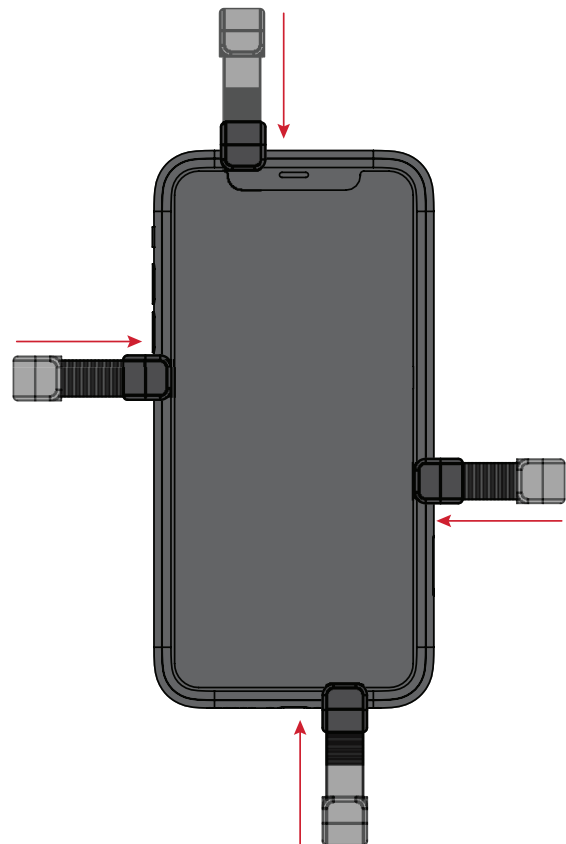


FREEDOM MICRO UNIVERSAL BRACKET

Part numbers 165-01034, 165-01404

FREEDOM MICRO® INSTALLATION GUIDE




- 5** Tighten the bracket arms with the Double Sided System Tool via the access holes on the back. Squeeze arms together while tightening screws to ensure a snug fit.

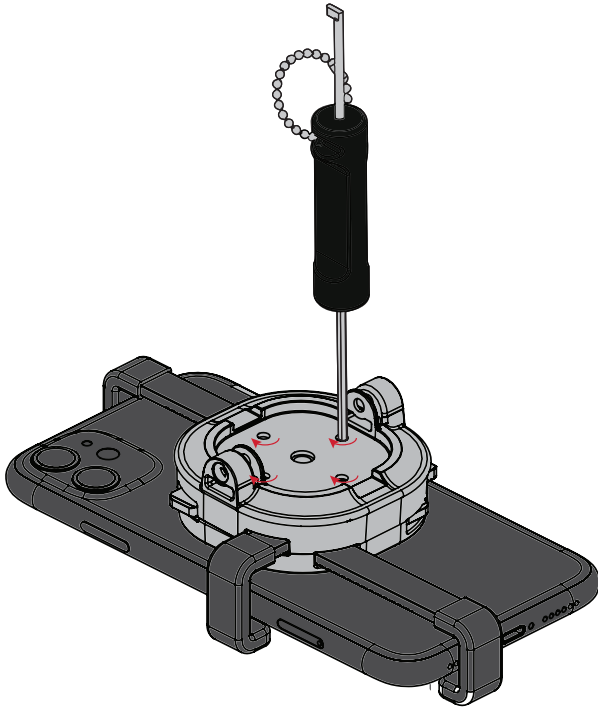


! Double-check that arm screws are fully tightened! Also, check arms monthly to ensure they are tight. Arms may loosen over time with use.

- 7** Insert the AirTether™ dovetail into the puck and dock the puck/bracket/device assembly on the riser.

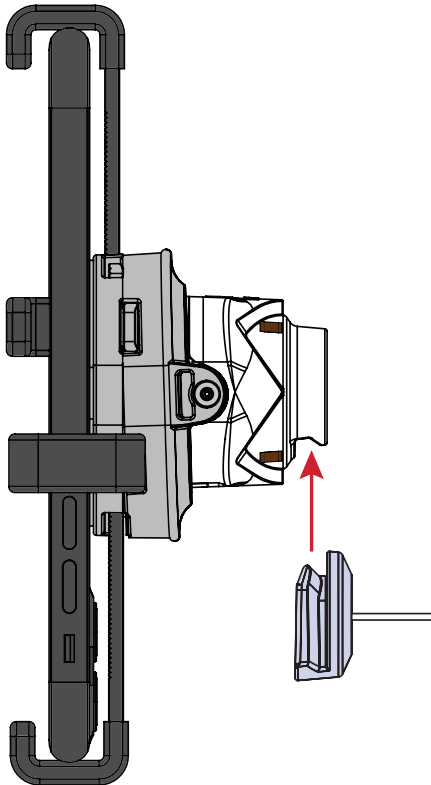

- 6** Insert puck without VHB and tighten the 2 captive security fasteners to either side of the puck. If using retrofit lockdown bracket, insert puck, then proceed to steps 7 and 8.

! Puck is installed without VHB.

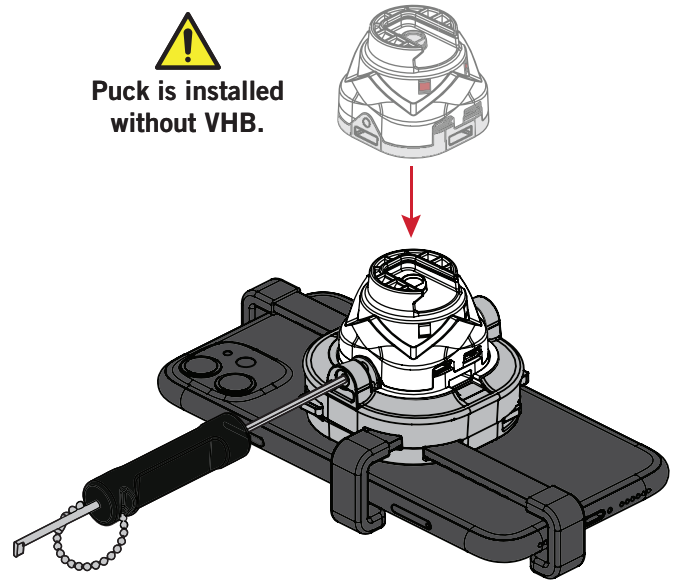

! Check mounting screws monthly to ensure they have not loosened up due to use.

- 8** If using the retrofit position bracket, dock the puck, and tighten the 2 captive security fasteners to either side of the puck through bracket stirrup.

