


DISPOSABLE WATCH SENSOR


FREEDOM CORE II™ INSTALLATION GUIDE

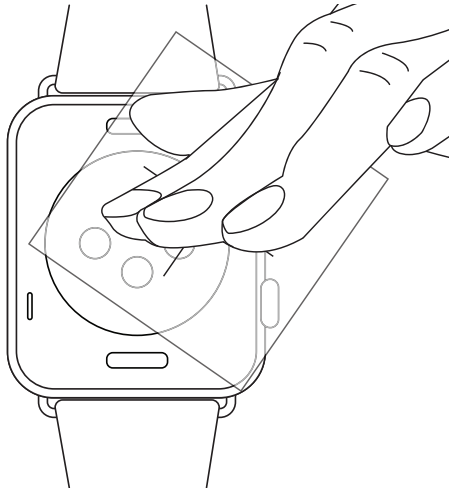


1 Clean the device with an alcohol wipe and let dry.




2 Peel VHB on the watch sensor.

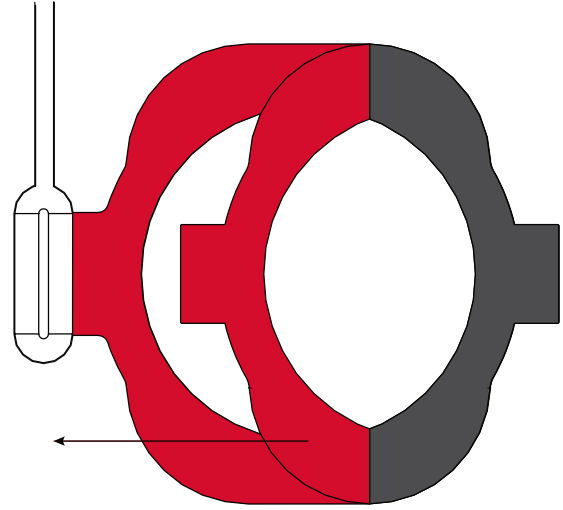

3 Place on the back of the device with the wire pointing off of the top of the device.

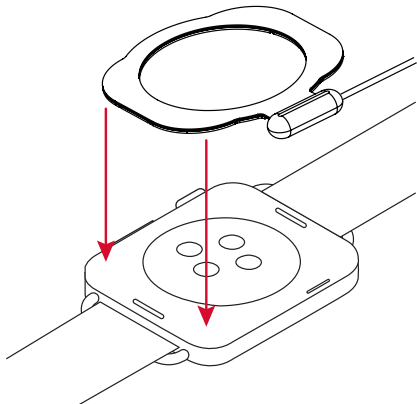

4 Press down for 10 seconds. Refer to AT&T merchandising guidelines for final fixture integration.

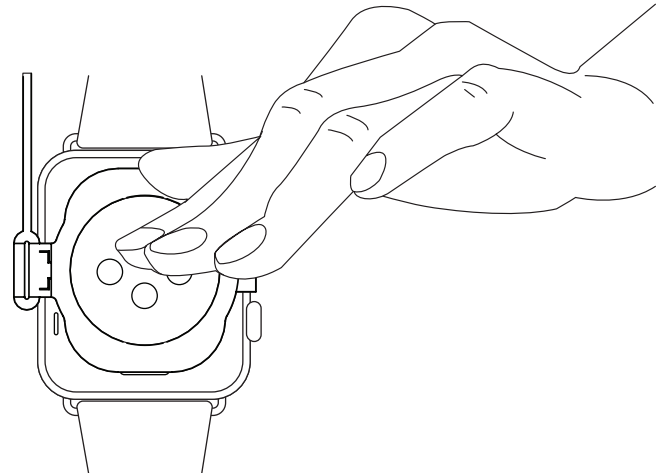

5 If using Freedom Core II™ insert the 6-pin Molex end of the sensor into the Freedom Core II™ Alarm Module until it clicks.

