




- 1** Clean the device with an alcohol wipe.

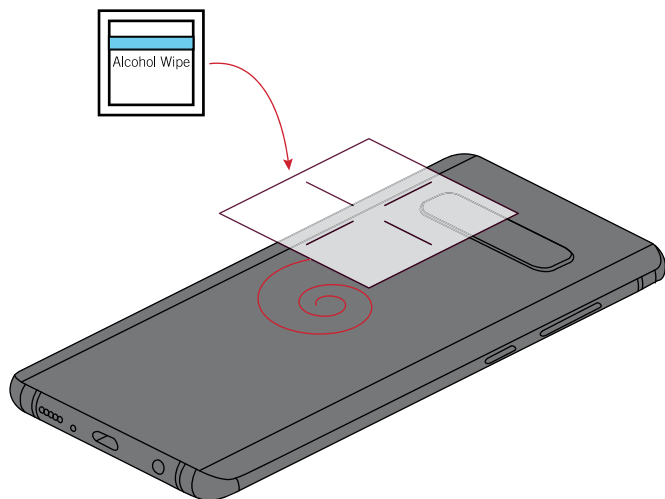


- 2** Peel red backing off of the adhesive on the SpeedPlate™.

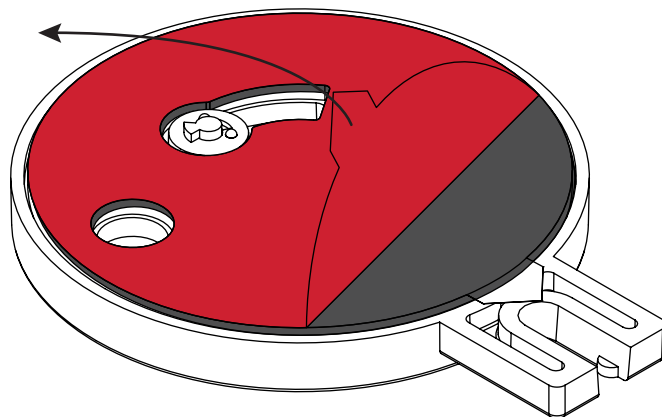


- 3** Apply the SpeedPlate™ to the phone, with the cable retainer towards the charge port of the phone. Use the SpeedPlate cable retainer as alignment reference. Apply firm pressure against the SpeedPlate to the phone for a minimum of 10 seconds.

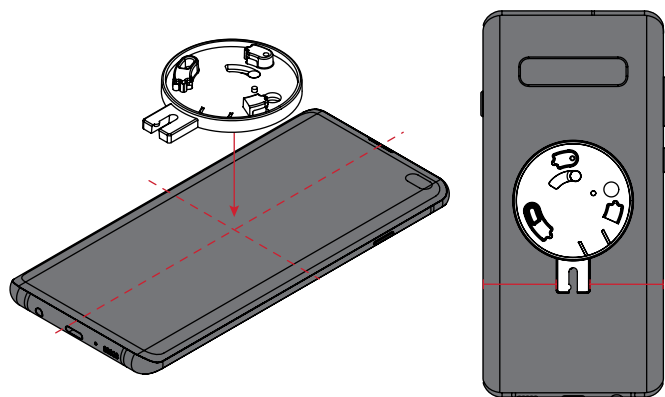


- 4** Place the device onto the puck and rotate the device clockwise on the puck until it locks into place.

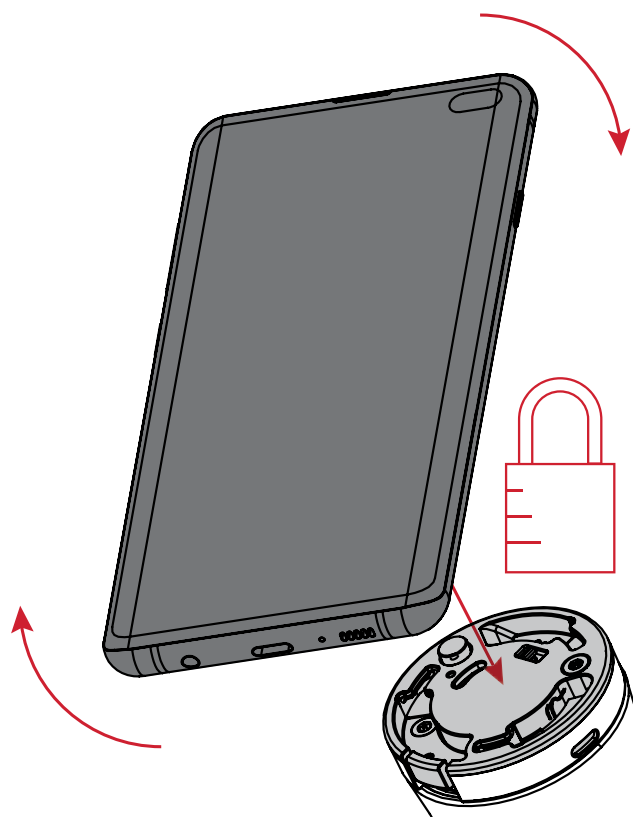


- 1** Insert the crescent end of the Freedom Micro® II tool into the opening to the right of the LED.

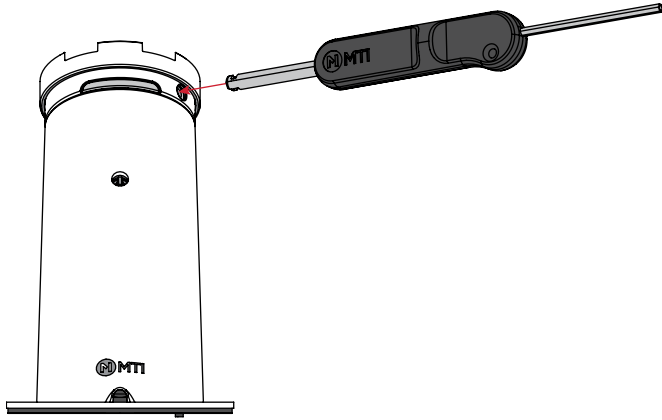


- 2** Twist the Freedom Micro® II tool clockwise 45 degrees and hold it in place.

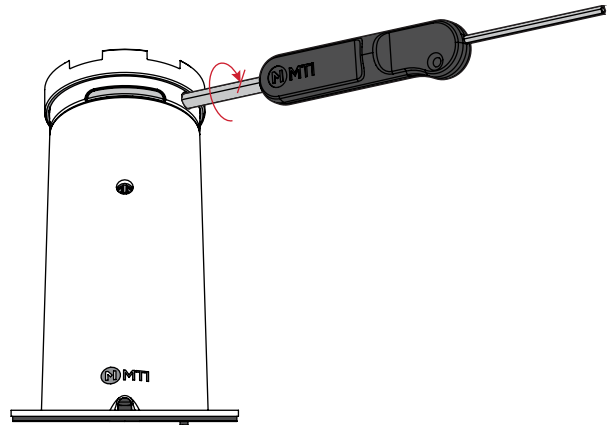

- 3** With the Freedom Micro® II tool held in the twisted position, rotate the SpeedPlate™ counterclockwise.

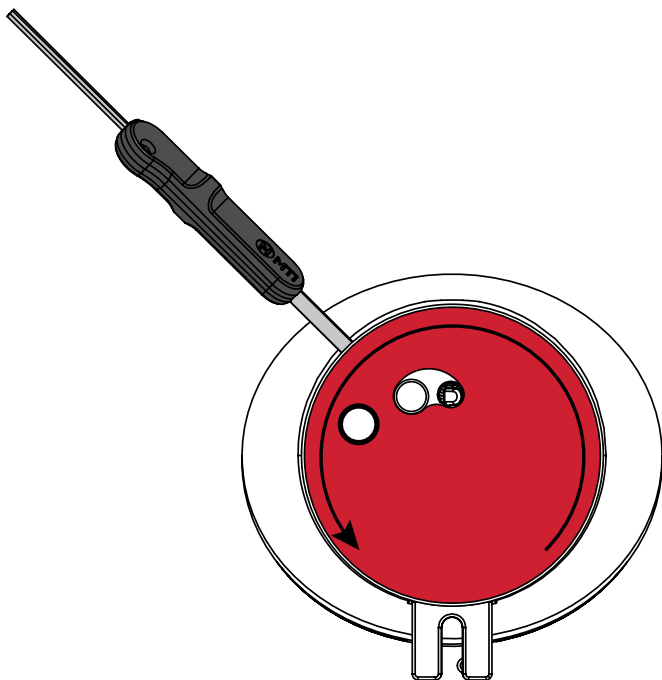

- 4** Remove the SpeedPlate™ from the Freedom Micro® II Puck, then release and remove the Freedom Micro® II tool.

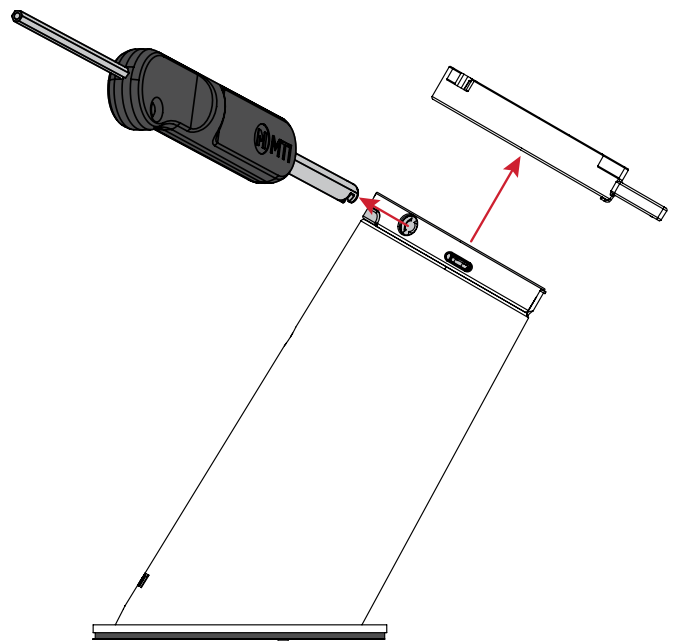


REMOVING SPEEDPLATE™


FREEDOM MICRO® II/MICRO® II HS MANUAL




- 1** Place the VHB removal tool around the SpeedPlate™,

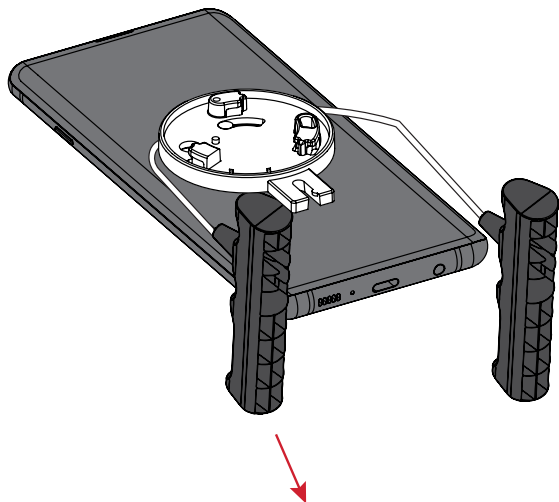

- 2** Pull the tool, working it back and forth like a saw, until the SpeedPlate™ comes off the device

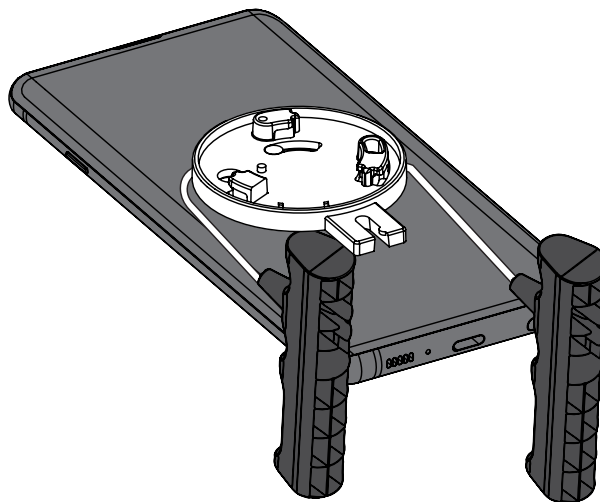


- 3** Roll any remaining adhesive off of the device.

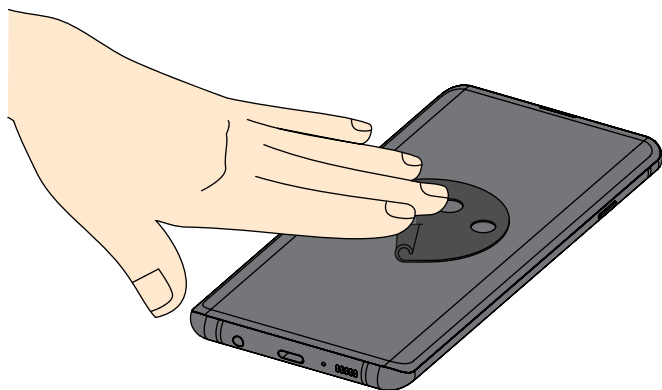

REMOVING PUCK FROM TETHER

- 1** Lift puck out of riser, insert the crescent end of the Freedom Micro II tool into the opening below the charge port on the puck. Twist the Freedom Micro II tool counterclockwise to unlock the puck from the tether.

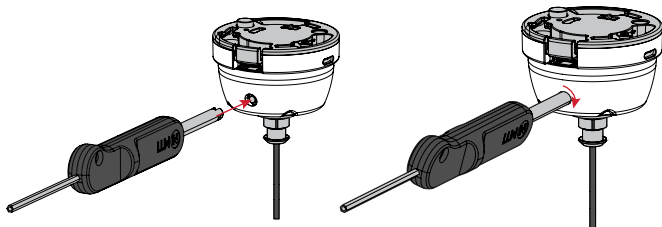

- 2** Once the puck is loose, rotate the puck 45 degrees counterclockwise in relation to the tether. Lift the puck off of tether connection.

