


Getting Started Guide

2025 AT&T Samsung Slim - Fleet/SOFT

MERDP052513753Ea



M Kit Components

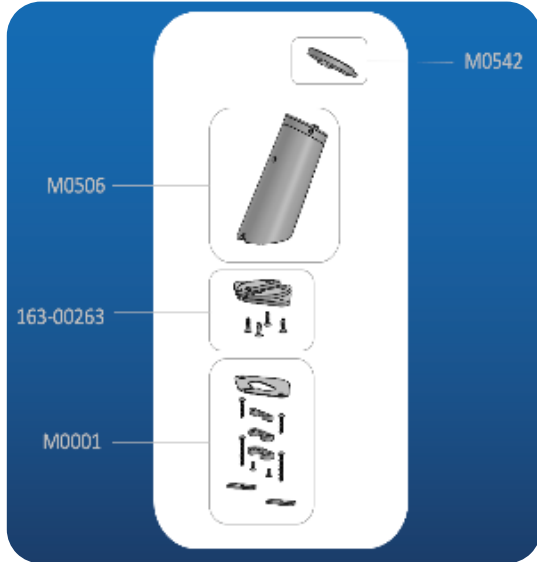

Part #163-00263
Track

Part #M0506
FMII HSM Puck/Riser

Part #M0542
SpeedPlate



Part #M0672
Buffer Pad

Note:

- **BEFORE** installation make sure to watch the video included and review the install guide for the adhesive plate. Failure to do may cause device set delays.
- Uniquely this device will not be merchandised on a bracket, please use adhesive plate and follow instructions provided.
- Micro II tool will be required, please use from BOH. If you have lost the tool, please order online a replacement.

Need assistance?

We're here to help.

Questions & Troubleshooting:

800-897-1350

attsupport@mtigs.com

MTI Online Site:

store.mtigs.com

**All new users must sign up.
Complete first, last, and email.**

Sign up account number: 109298

Sign up passcode: dealer1

Order Inquiries:

attsalesupport@mtigs.com