

Getting Started Guide

2026 Samsung Summer Phones



Kit F1 Components

AR FM II w/o H8 - Adhesive Mount only for Micro II



Part #M0104
Freedom Micro® II
SpeedPlate™ for Phones



Part #185-01565
Freedom Micro®
Adhesive Transfer Pad, 5-
pk



Part #165-00908
Ultra Fine Hand Pad
(Single Count)

Scan or click for
Installation Guide



Kit F2 Components

AR FM II w/ H8 - Adhesive Mount only for Micro II



Part #165-00908
Ultra Fine Hand Pad
(Single Count)



Part #M0104
Freedom Micro® II
SpeedPlate™ for Phones



Part #185-01565
Freedom Micro®
Adhesive Transfer Pad, 5-
pk



Part #163-00329
Freedom Micro® II Filler
Plate for Samsung Fold 7
(Device bracket sold
separately)



Part #165-01385
Freedom Micro® II
SpeedBracket™ for
Samsung Fold5-6, 7*(req
retrofit pc.) phone w/
Angled Arm

Scan or click for
Installation Guide



Freedom Micro II
SpeedPlate Guide



Freedom Micro II
Samsung Fold Guide



Samsung Fold
Adhesive Guide

Need assistance?

We're here to help.

Questions & Troubleshooting:

800-897-1350

attsupport@mtigs.com

MTI Online Site:

store.mtigs.com

All new users must sign up.
Complete first, last, and email.

Sign up account number: 109298

Sign up passcode: dealer1

Order Inquiries:

attsalesupport@mtigs.com



Click or Scan for Product
Landing Page

Getting Started Guide

2026 Samsung Summer Phones



Kit G1 Components

AR FM II w/ H8 w/ Adhesive Mount - AR FM II w/ H8 w/ Adhesive Mount




Part #M0104
Freedom Micro® II
SpeedPlate™ for Phones



Part #185-01565
Freedom Micro®
Adhesive Transfer Pad, 5-
pk



Part #165-00908
Ultra Fine Hand Pad
(Single Count)

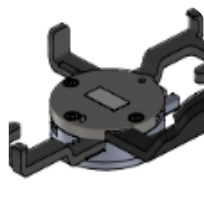

Part #165-01605
Freedom Micro® II
SpeedBracket™ for H8 w/
Angled Arm

Scan or click for Installation Guide



Freedom Micro II
SpeedPlate Guide



Freedom Micro II Custom
Samsung Bracket Guide

Kit G2 Components

AR FM II w/o H8 - Adhesive Mount for Micro II & New FM II HS
Mechanical Post – H8/Q8 Bracket Mount



Part #165-00908
Ultra Fine Hand Pad
(Single Count)



Part #M0104
Freedom Micro® II
SpeedPlate™ for Phones



Part #185-01565
Freedom Micro® Adhesive
Transfer Pad, 5-pk



Part #163-00329
Freedom Micro® II Filler
Plate for Samsung Fold 7
(Device bracket sold
separately)



Part #165-01385
Freedom Micro® II
SpeedBracket™ for
Samsung Fold5-6, 7*(req
retrofit pc.) phone w/
Angled Arm



Part #165-01605
Freedom Micro® II
SpeedBracket™ for H8 w/
Angled Arm

Scan or click for Installation Guide



Freedom Micro II
SpeedPlate Guide



Freedom Micro II
Samsung Fold Guide



Samsung Fold
Adhesive Guide



Freedom Micro II Custom
Samsung Bracket Guide

Special call out for demerching from the Q7

VHB Removal Tool 003-0094-00: DEFAULT

Method:

Wrap string around VHB area, NOT under Transfer Tape
Pull on handles and work carefully until VHB separate from Transfer Tape
Peel Transfer Tape from device

Result:

Easier and not complicated to perform

Need assistance?

We're here to help.

Questions & Troubleshooting:

800-897-1350

attsupport@mtigs.com

MTI Online Site:

store.mtigs.com

All new users must sign up.
Complete first, last, and email.

Sign up account number: 109298

Sign up passcode: dealer1

Order Inquiries:

attsalesupport@mtigs.com



Click or Scan for Product
Landing Page