


Getting Started Guide

2026 Samsung FE - AR



M Kit A - Legacy

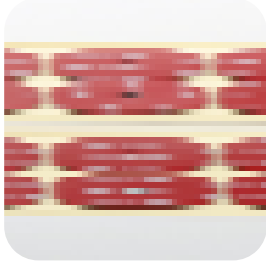


Part #185-01579

Freedom Micro® Single Device Puck Adhesive & Large Transfer Tape

Click the links below for installation guides

- [Freedom Micro Transfer Tape](#)

M Kit B - New

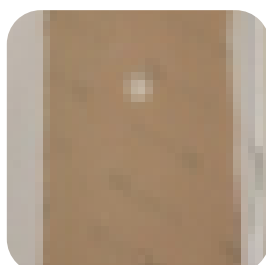

Part #185-01622

Freedom Micro® II Single Device SpeedPlate™ for Phones & Large Transfer Tape

Click the links below for installation guides

- [Freedom Micro II Speedplate Transfer Tape](#)

Need assistance?

We're here to help.

Questions & Troubleshooting:

800-897-1350

attsupport@mtigs.com

MTI Online Site:

store.mtigs.com

All new users must sign up.

Complete first, last, and email.

Sign up account number: 109298

Sign up passcode: dealer1

Order Inquiries:

attsalesupport@mtigs.com



Click or Scan for Product
Landing Page